



# **Installation Manual**

#### Congratulations on your new Ezi Reach Sliding Cargo Tray!

Now, let's get it installed so you can start enjoying easy, hassle-free cargo access.

#### Before commencing installation:

We recommend having two people available for the installation process, this saves time and prevents injuries whilst lifting the product.


#### **Equipment required:**

- Cordless drill
- 9mm Drill bit


#### **Optional Extras:**

- Rust proof spray paint
- Torch
- Clean cloth
- Garage Creeper
- Safety glasses

- Tape measure
- Spanner

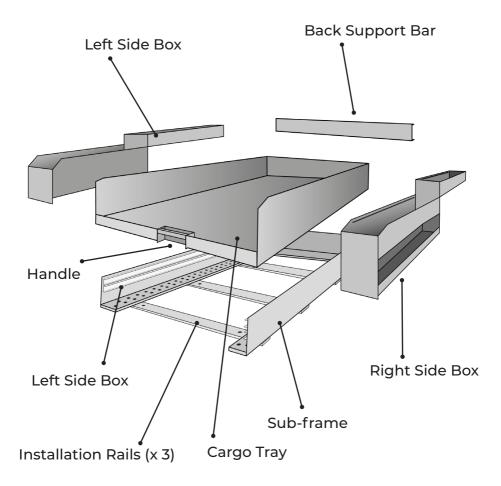


Images are for illustrative purposes only and are not drawn to scale

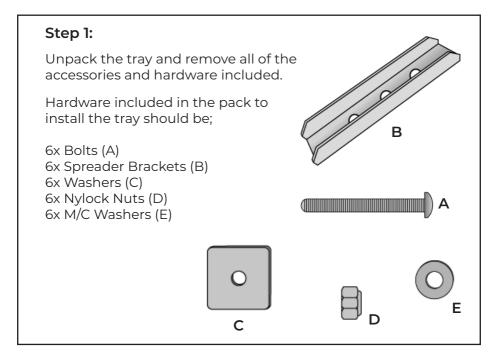

#### Step 2:

Open the box and set the Side Boxes (if applicable) aside for now. Locate the hardware provided and set aside.

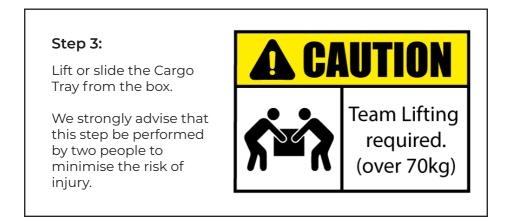

#### Step 4:

Place the tray onto the vehicles tailgate & carefully slide the Cargo Tray into the tub between the wheel arches.


We strongly advise that this step be performed by two people to minimise the risk of injury.

#### TIP:

We recommend covering your tailgate to prevent damage while positioning the tray.

#### Step 5:

Position the tray evenly between the wheel arches, ensuring it is parallel to the tub. The tray should be positioned so that there is a 1 cm gap between the tray handle and the closed tailgate. This ensures there is room to install the Support Bar at the back of the tray.

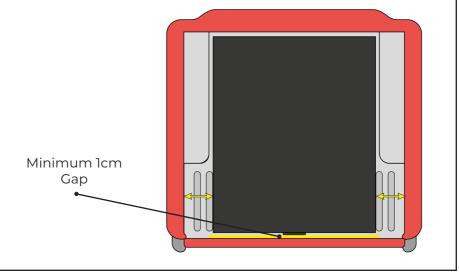


### Step 6:

Lift the handle & carefully slide the cargo tray out approximately half way to expose the holes in the Installation Rails.

Locate the two holes positioned on either side of the Installation Rail at the back of the tray.

Note: A visual check underneath the vehicle is required to ensure these holes don't interfere with wiring etc.

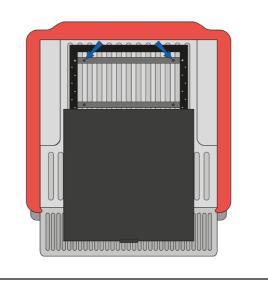


#### Step 7:

Using a cordless drill and the drill bit, drill straight down through the hole in the Installation Rail, and through the tub floor.

Tip: Be careful not to move the Cargo Tray or you will need to reposition it.

Tip: Do not drill any other holes until the first set has been securely bolted down.

Warning: Drill slowly and carefully to avoid accidentally damaging any wiring or components that may be located beneath the tub.

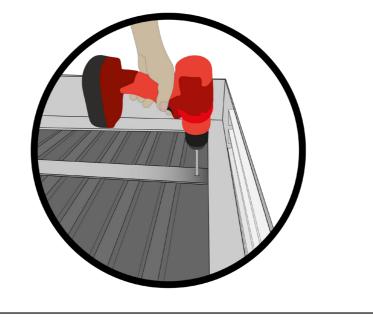

#### Step 8:

Once drilled, remove all swarf and spray the holes with rust proof spray paint to prevent rusting.


Place the bolts (A) with the M/C washers (E) into the holes from within the tub. From underneath the tub, place the spreader brackets (B) over the bolts and fasten using the washers (C) and nylock nuts (D).


The spreader brackets (B) should be at a 90 degree angle to the tubs ribs.

Tighten the bolts using a drill from the inside of the tub.

Tip: Having two people; one working in the tub and the other working underneath the vehicle, makes this process much quicker.

Tip: Some vehicles have extensive under-body components that may limit the space available for the Spreader Brackets. If installing the Spreader Brackets is not feasible, use the provided washers and nuts instead.

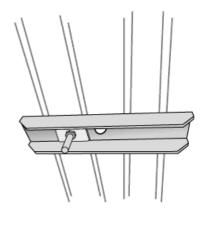

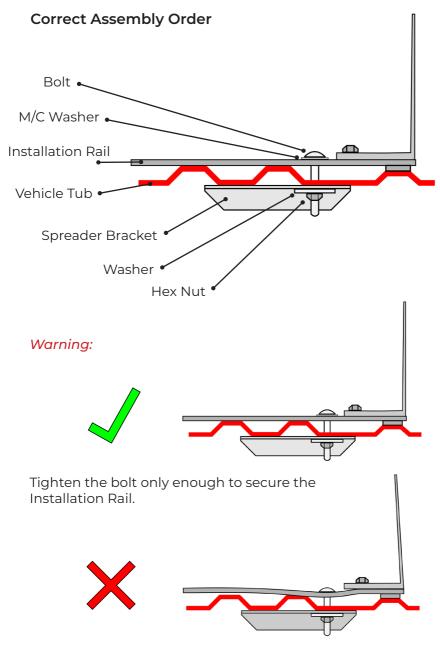


Over tightening the bolt will cause the Installation Rail to bend and warp the Cargo Tray.

#### Step 9:

Identify the two holes positioned on either side of the Installation Rail in the middle of the tray and repeat Steps 7-9.

Carefully extend the Cargo Tray fully and repeat Steps 7-9 for the two holes positioned on either side of the Installation Rail in the middle of the tray

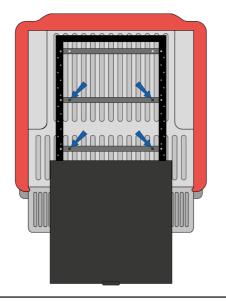

#### Step 10:

Clean away any swarf from within the tub as this may hinder the movement of the cargo tray.


Test your cargo tray by sliding it in and out of the vehicle a few times. Make sure nothing interferes with the movement, the tray should move freely if installed correctly.

#### Step 10 Continued:

Tip: To operate your cargo tray squeeze the handle and pull the tray towards you. To engage the locking system, simply let go of the handle and the tray will lock into position every 10cm once it's cleared the tailgate.

## Side Box Fitting Instructions


We recommended that the cargo tray is fitted to the vehicle before the side boxes are attached.

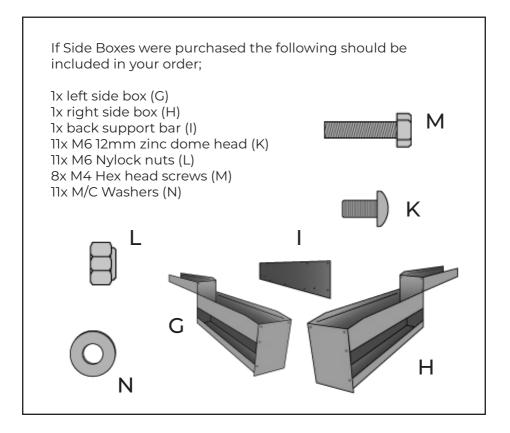

### Step 1:

Extend the Cargo Tray enough to provide sufficient working space.


Place the Support Bar on the outside rear of the tray. Loosely install 3x M6 12mm screws (K), 3x M/C washers (N) and 3x nylock nuts (L), ensuring the screw heads are inside the tray.

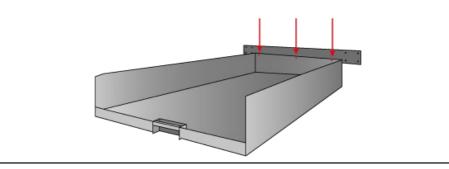


#### Step 2:

Position the right side box (H) against the outside of the tray on the right hand side. Using 4x M6 12mm dome head screws (K) and 4x nylock nuts (L) loosely attach the side box.

The heads of the screws should be on the inside of the tray.

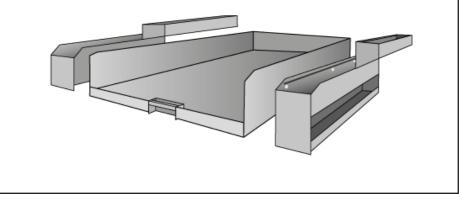


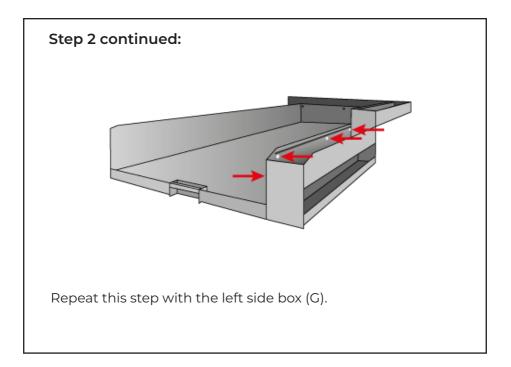

#### Step: 3

Using a cordless drill, fit 4x M4 Hex head screws (M) through the back of the support bar and into the screw flutes found in the back of the right side box (H).

Repeat this step with the left side box (G).

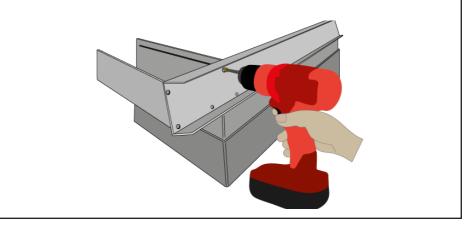

#### Step: 4

Check that all parts are aligned correctly and then tighten all the fittings with a cordless drill.

## Congratulations!

You've now completed the installation of your Ezi Reach Sliding Cargo Tray.

If you require further assistance to install your tray, please don't hesitate to contact us via our website or email.

www.ezireach.com.au

info@ezireach.com.au